

MODEL:
CINDERS SLIMFOLD 3
OUTDOOR GAS GRILL (PROPANE)
for use with a 20 lb LP-gas cylinder

PROFESSIONAL USER`S MANUAL (ISSUE 2)

FOR YOUR SAFETY, PLEASE READ THIS MANUAL
CAREFULLY BEFORE USING THIS GRILL

FIRE AND EXPLOSION
MAY RESULT IF THE
INSTRUCTIONS IN THIS
MANUAL ARE NOT
FOLLOWED

FOR YOUR SAFETY:

IF YOU SMELL GAS

1. **Shut off the gas supply to grill.**
2. **Extinguish any open flame.**
3. **If odour continues, immediately call your gas supplier or fire department.**

FOR YOUR SAFETY:

- **THIS GRILL IS FOR OUTDOOR USE ONLY.**
- **THIS GRILL IS FOR USE WITH CYLINDERS MARKED `PROPANE` ONLY.**
- **DO NOT store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance.**
- **DO NOT store an LP cylinder not connected for use in the vicinity of this or any other appliance.**
- **DO NOT let children operate or play near the grill.**
- **This grill is for use with propane only.**
- **Never check for gas leaks with a lighted match of open flame.**
- **Always leave filled LP cylinders outdoors.**

**INSTALLER MUST LEAVE THESE INSTRUCTIONS WITH THE CONSUMER
PLEASE SAVE THIS MANUAL FOR FUTURE REFERENCE**

LOCATION OF THE GRILL

This grill is designed and certified for OUTDOOR USE in well ventilated area only. The installation of this appliance must conform with the local codes, in the absence of local codes, with the current National Fuel Gas Code, ANSI Z223.1 in the US or CAN/CGA-B149.2 Propane Installation Code, in Canada.

Observe the following safety rules before each use:

- DO NOT install in or on recreational vehicles and/or boats.
- DO NOT use inside a building, porch, balcony, garage or any other enclosed or semi-enclosed area.
- Maintain at least 36 inches (915mm) from all sides of the grill to any combustible material.
- DO NOT locate under an unprotected combustible ceiling or cover.
- DO NOT store anything under the grill. Keep area around and under the grill clear of any combustible material, gasoline and other flammable liquids and gases, including spare LP cylinder.
- DO NOT place grill on an uneven or unlevelled surface.
- Locate grill out of traffic`s way. Place the grill in a place where people are not likely to bump into or tip it over.
- DO NOT use grill if hose is damaged. Replace with a hose assembly as specified by the manufacturer, see `HOSE`.

FOLDING AND UNFOLDING OF THE GRILL


To unfold the grill:

- Place the grill on the ground and lift the grill up by a wooden handle. Push the legs down and swing them away from the grill.
- Unfold the outer legs through a complete 360 degrees circle and place them into the two metal hooks at the end of the grill. Push the leg assembly firmly into place.
- Read the section `LP Cylinder` on Page 3 of these instructions before connecting.

To fold the grill:

- Turn the LP tank gas valve completely clockwise to close the supply to the grill.
- Disconnect the gas connection to the LP tank.
- Remove the LP tank and put it aside.
- Lift the grill by the wooden handles and unhook the leg assembly from one end of the grill. Fold the outer legs through a complete 360 degree circle under the grill, pushing the leg assembly firmly into place.

CAUTION: DO NOT attempt to fold the grill while it is hot. Let it cool before folding.

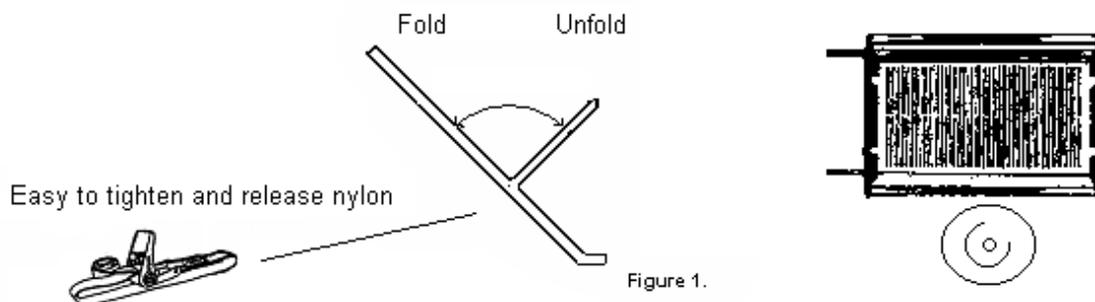

GREASE DRIP CAN

Use any standard Pepsi or Beer can with a RING-PULL top. Firmly slide the clip at either end of the grill inside the RING-PULL opening, so that the opening is below the grease drain. Secure can as necessary.

LP CYLINDER

This grill is suitable for use with a 20 lb. LP cylinder with approximate dimensions of 12 inch diameter and 18 inch high. The LP-gas supply cylinder must be constructed and marked in accordance with the specifications for LP-gas cylinders of the U.S. Department of Transportation (DOT) or the National Standard of Canada, CAN/CSA-B339, Cylinder, Spheres and Tubes for the transportation of dangerous goods.

Carefully read and follow the instruction and warning marking on the LP Cylinder.

- Fill the LP cylinder with propane gas at reputable propane dealer.
- The LP cylinder must be fastened to the grill in an upright position of proper vapour withdrawal. An easy to tighten and release nylon strap is located as in figure 1.
- You **MUST** use this strap to secure the LP cylinder to the **OUTSIDE** of the grill legs.
- You must **NEVER** locate the LP cylinder directly beneath the firebox.
- You must **NEVER** allow the hose to touch any part of the grill which may become hot.
- Regulator and hose must be used. Attach the regulator fitting to the LP cylinder valve. Firmly tighten the fitting by hand only, turning counter clockwise . The hose to the regulator must be located horizontal to the regulator to keep any water or liquid from dripping onto the regulator.



The 11 inch W.C. (2.8 kpa) pressure regulator supplied with the appliance must be used.

- Gas must be turned off and cylinder disconnected at the propane cylinder when the appliance is not in use.
- When the grill is to be stored indoors, disconnect the LP cylinder from the grill and store it outdoors in a well ventilated area out of the reach of children.
- When the LP cylinder is connected to the grill, the grill and LP cylinder must be stored outdoors in a well ventilated area.
- The LP cylinder must include a collar to protect the cylinder valve.

HOSE

- A replacement flexible hose connector shall comply with the low pressure requirements of the Standard for PIGTAILS AND FLEXIBLE HOSE CONNECTORS FOR LP-GAS, ANSI/UL 569.
- It shall be an integral assembly for use with outdoor cooking appliances, including connectors permanently attached to either end of the hose.
- A qualified gas engineer must be consulted to ensure the correctness of the connections, and a `LEAK TEST` must be employed before operating the grill.

LEAK TEST

- Make a solution of one half liquid soap with one half water.
- Turn the grill control knob to the `OFF` position.
- Turn the LP cylinder valve counter-clockwise to turn on the gas supply to the grill.
- Brush the soap solution on all hoses, tubing, fittings, valves and connections.
- Look for any soap bubbles. The bubbles indicate that there is a leak.
- If the gas leak is located at a gas connection, tighten the connection. If the leak can not be stopped, do not use the grill until the part is properly repaired or replaced.
- Replace all leaky hoses, tubing and valves.
- Turn the LP cylinder valve clockwise to turn off the gas supply to the grill.
- Wipe away soapy bubbles at end of test.

BEFORE OPERATING THE GRILL

Make sure everyone who operates the grill reads and understands the information in this manual.

Conduct the following checks before operating the grill:

- Inspect the hose. If it is evident there is excessive abrasion or wear, or the hose is cut, it must be replaced prior to the outdoor cooking gas appliance being put into operation. The replacement hose assembly shall be that specified by the manufacturer.
- Check the proper mounting of the LP cylinder. See section under `LP CYLINDER`.
- Perform the mandatory leak test, see section under `LEAK TEST`, before the first use of the grill, after storing the grill for a long time, after transporting the grill and after filling the LP tank.
- Check and clean the burner venturi tubes periodically.
- Check to make sure the control knob is at the `OFF` position before turning on the gas supply at the LP cylinder.


LIGHTING PROCEDURES

If the burner flame goes out while the grill is operating, always turn gas control knob to the `OFF` position and wait 5 minutes before attempting to re-light the grill.

Read the safety instructions in previous sections before lighting.

- Turn control knob on the grill to the `OFF` position by turning clockwise until a positive stop is felt.
- Turn the LP tank gas valve completely counter-clockwise to open gas supply to the grill.
- Open the control knob on the grill fully and immediately place a lighted match through the lighting hole underneath the center of the grill.
- If burner fails to light, turn control knob to `OFF` position and wait 5 minutes for unburned gases to clear before attempting to light grill again.

Forcing control knob will damage valve.

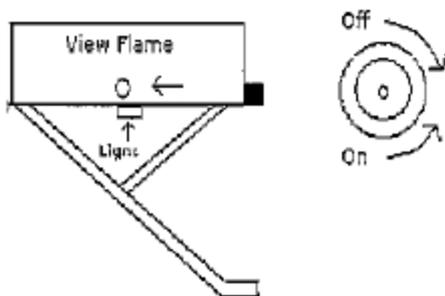

WHILE OPERATING THE GRILL

- DO NOT move the grill.
- DO NOT leave the grill unattended
- DO NOT obstruct the flow of combustion and ventilation air.
- Keep any electrical supply cord and the fuel supply hose away from any heated surfaces.
- Keep area around the grill clean and clear of debris, combustible materials, gasoline and other flammable vapours and liquids.
- Turn off the gas at the supply cylinder while not actually in use.

CARE AND MAINTENANCE

- Inspect the grill regularly to make sure that all parts are functioning properly.
- Replace all broken or worn parts.
- Burn-off grease build-up by operating the grill at maximum heat setting for 15 minutes at the end of each use.
- Empty or replace grease drip can at the end of each use.
- Clean the grill body, control panel, handles and legs with mild detergent.
- Check and remove any dust, debris or spider webs from the burner venturi.
- Inspect the hose. If it is evident there is excessive abrasion or wear, or the hose is cut, it must be replaced immediately. The replacement hose assembly must be that specified by the manufacturer. Refer to the last page.
- Light the appliance, after reading the LIGHTING PROCEDURES section of these instructions. The burner should light immediately, and be viewed from both sides to exhibit blue flames with occasional yellow tips. These should extend along the full length of the single burner.
- Replacement parts are available from the manufacturer, through your distributor. Refer to the contact details on the last page if experiencing difficulty.

STORAGE

- Disconnect the LP cylinder from the grill when not in use and store the LP cylinder as instructed by labels located on the cylinder. DO NOT store the LP cylinder in an enclosed area and NOT within the reach of children.
- Complete the procedures in `CARE AND MAINTENANCE` before storage.
- Store the grill in a clean and dry location.

MANUFACTURER'S LIMITED WARRANTY

Limited warranty is extended to the original purchaser of the grill. To make a warranty claim the customer must show proof of purchase.

Stainless steel grill body and support legs are warranted to be free of defects in material and workmanship under normal use for a period of one year from the date of purchase.

The burners are warranted to be free of defects in material and workmanship under normal use for life.

The finish and other components of the grill are warranted to be free of defects in material and workmanship under normal use for a period of one year from the date of purchase.

This warranty does not cover any failure due to abuse, misuse, alteration, improper assembly, improper installation, improper maintenance or improper storage.

This warranty gives specific legal rights and you may have other rights which vary from state to state.

CINDERS BARBECUES LIMITED
BENTHAM INDUSTRIAL ESTATE
HIGH BENTHAM
LANCASTER
LA2 7NB
ENGLAND

Tele from USA and Canada 011 44 15242 62900
Fax from USA and Canada 011 44 15242 62955
Email: info@cindersbarbecues.com

U.S. DISTRIBUTION

CINDERS SLIMFOLD LLC
1990 MAIN STREET, STE 750
SARASOTA, FL 34236

PHONE: 941-309-5307
FAX: 941-309-5147
E-MAIL: info@slimfoldgrills.com
TOLLFREE: 1-877-426-2900