

Model: CINDERS **SLIMFOLD 6**

OUTDOOR GAS GRILL (PROPANE)

For use with 2 x 20 lb LP-gas cylinders (minimum)

Or 2 x 30 lb LP-gas cylinders (maximum)

PROFESSIONAL USER`S MANUAL (ISSUE 4)

FOR YOUR SAFETY, PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THIS GRILL

FIRE AND EXPLOSION
MAY RESULT IF THE
INSTRUCTIONS IN THIS
MANUAL ARE NOT
FOLLOWED

FOR YOUR SAFETY:

IF YOU SMELL GAS

1. Shut off the gas supply to grill.
2. Extinguish any open flame.
3. If odour continues, immediately call your gas supplier or fire department.

FOR YOUR SAFETY:

- THIS GRILL IS FOR OUTDOOR USE ONLY.
- THIS GRILL IS FOR USE WITH CYLINDERS MARKED `PROPANE` ONLY.
- DO NOT store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance.
- DO NOT store an LP cylinder not connected for use in the vicinity of this or any other appliance.
- DO NOT let children operate or play near the grill.
- This grill is for use with propane only.
- Never check for gas leaks with a lighted match or open flame.
- Always leave filled LP cylinders outdoors.

**INSTALLER MUST LEAVE THESE INSTRUCTIONS WITH THE CONSUMER
PLEASE SAVE THIS MANUAL FOR FUTURE REFERENCE**

CAUTION! CAUTION! LP Hose assemblies must only be fitted to this appliance by a competent gas engineer.
DO NOT OVER TIGHTEN

LOCATION OF THE GRILL

This grill is designed and certified for OUTDOOR USE in well ventilated area only. The installation of this appliance must conform with the local codes, in the absence of local codes, with the current National Fuel Gas Code, ANSI Z223.1/NFPA 54 or CAN/CGA-B149.1, Natural Gas Propane Installation Code.

Observe the following safety rules before each use:

- DO NOT install in or on recreational vehicles and/or boats.
- DO NOT use inside a building, porch, balcony, garage or any other enclosed or semi-enclosed area.
- Maintain at least 36 inches (915mm) from all sides of the grill to any combustible material.
- DO NOT locate under an unprotected combustible ceiling or cover.
- DO NOT store anything under the grill. Keep area around and under the grill clear of any combustible material, gasoline and other flammable liquids and gases, including spare LP cylinder.
- DO NOT place grill on an uneven or unlevelled surface.
- Locate grill out of traffic's way. Place the grill in a place where people are not likely to bump into or tip it over.
- DO NOT use grill if hose is damaged. Inspect the hose before each use of this outdoor cooking appliance. Replace with a hose assembly as specified by the manufacturer, see `HOSE`.
- DO NOT store a spare LP-gas cylinder under or near this appliance.

FOLDING AND UNFOLDING OF THE GRILL


To unfold the grill:

- Place the grill on the ground and lift the grill up by a wooden handle. Push the legs down and swing them away from the grill.
- Unfold the tubular braces from between the legs and place them into the two metal hooks at the ends of the grill. Push the braces firmly into place.
- Read the section `LP Cylinder` on Page 3 of these instructions before connecting.

To fold the grill:

- Turn both LP tank gas valves completely clockwise to close the supply to the grill.
- Disconnect the gas connection to both LP tanks.
- Remove both LP tanks and put aside.
- Lift the grill by the wooden handles and unhook the tubular braces. Fold the braces in between the legs and fold the legs under the grill, pushing them firmly into place.

CAUTION: DO NOT attempt to fold the grill while it is hot. Let it cool before folding.

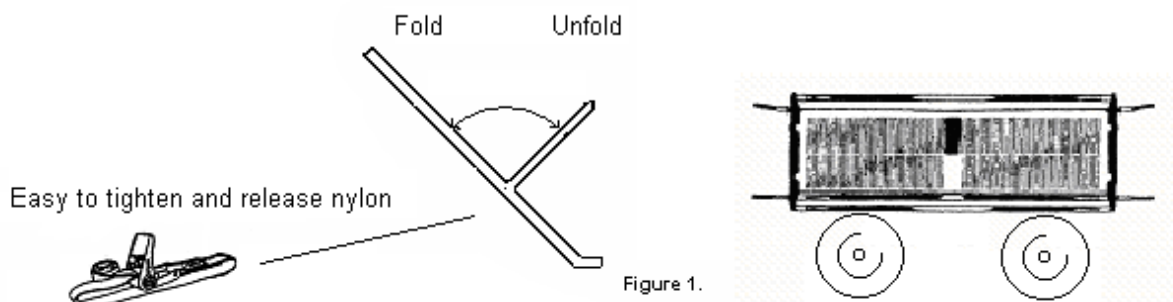

GREASE DRIP CAN

Use any standard Pepsi or Beer can with a RING-PULL top. Firmly slide the clip at either end of the grill inside the RING-PULL opening, so that the opening is below the grease drain. Secure can as necessary.

LP CYLINDERS

This grill is suitable for use with a minimum of two 20lb or 30 lb LP cylinders only with approximate dimensions of 12 inch diameter and 21 or 24 inch high. The LP-gas supply cylinders must be constructed and marked in accordance with the specifications for LP-gas cylinders of the U.S. Department of Transportation (DOT) or the National Standard of Canada, CAN/CSA-B339, Cylinder, Spheres and Tubes for the transportation of dangerous goods.

Carefully read and follow the instruction and warning marking on the LP Cylinders.

- Fill the LP cylinders with propane gas at reputable propane dealer. Never fill the cylinder beyond 80 percent full. If this instruction is not followed exactly, a fire causing death or serious injury may occur.
- The LP cylinders must be fastened to the grill in an upright position of proper vapour withdrawal. An easy to tighten and release nylon strap is located as in figure 1 on both leg assemblies.
- You MUST use this strap to secure the LP cylinders to the OUTSIDE of the grill legs.
- You must NEVER locate the LP cylinders directly beneath the firebox.
- DO NOT store a spare LP-gas cylinder under or near this appliance. If this instruction is not followed exactly, a fire causing death or serious injury may occur.
- You must NEVER allow the hose to touch any part of the grill which may become hot.
- Regulators and hose must be used. Attach the regulator fittings to the LP cylinder valves. Firmly tighten the fittings by hand only, turning clockwise B. The hoses to the regulators must be located horizontal to the regulators to keep any water or liquid from dripping onto the regulators.



The 11 inch W.C. (2.8 kpa) pressure regulators supplied with the appliance must be used.

- Gas must be turned off and cylinders disconnected at the propane cylinders when the appliance is not in use.
- When the grill is to be stored indoors, disconnect the LP cylinders from the grill and store them outdoors in a well ventilated area out of the reach of children.
- When the LP cylinders are connected to the grill, the grill and LP cylinders must be stored outdoors in a well ventilated area.
- The LP cylinders must include a collar to protect the cylinder valves.

HOSES

- A replacement flexible hose connector shall comply with the low pressure requirements of the Standard for PIGTAILS AND FLEXIBLE HOSE CONNECTORS FOR LP-GAS, ANSI/UL 569.
- It shall be an integral assembly for use with outdoor cooking appliances, including connectors permanently attached to either end of the hose.
- A qualified gas engineer must be consulted to ensure the correctness of the connections, and a `LEAK TEST` must be employed before operating the grill.
- The hose **MUST** be inspected before each use of this outdoor cooking appliance. Do not use this grill if the hose is damaged.

LEAK TEST

- Make a solution of one half liquid soap with one half water.
- Turn all the grill control knobs clockwise to the `OFF` position until a positive stop is felt.
- Turn the LP cylinder valve counter-clockwise to turn on the gas supply to the grill.
- Brush the soap solution on all hoses, tubing, fittings, valves and connections.
- Look for any soap bubbles. The bubbles indicate that there is a leak.
- If the gas leak is located at a gas connection, tighten the connection. If the leak can not be stopped, do not use the grill until the part is properly repaired or replaced.
- Replace all leaky hoses, tubing and valves.
- Turn both LP cylinder valves clockwise to turn off the gas supply to the grill.
- Wipe away soapy bubbles at end of test.

BEFORE OPERATING THE GRILL

Make sure everyone who operates the grill reads and understands the information in this manual.

Conduct the following checks before operating the grill:

- Inspect the hoses. If it is evident there is excessive abrasion or wear, or a hose is cut, it must be replaced prior to the outdoor cooking gas appliance being put into operation. The replacement hose assembly shall be that specified by the manufacturer.
- Check the proper mounting of the LP cylinders. See section under `LP CYLINDERS`.
- Perform the mandatory leak test, see section under `LEAK TEST`, before the first use of the grill, after storing the grill for a long time, after transporting the grill and after filling the LP tanks.
- Check and clean the burner venturi tubes periodically.
- **Check to make sure the control knobs are at the `OFF` position by turning clockwise until a positive stop is felt before turning on the gas supply at the LP cylinders.**


LIGHTING PROCEDURES

If the burner flame goes out while the grill is operating, always turn gas control knobs to the `OFF` position by turning clockwise until a positive stop is felt and wait 5 minutes before attempting to re-light the grill.

Read the safety instructions in previous sections before lighting.

- Turn both control knobs to the `OFF` position by turning clockwise until a positive stop is felt. See the picture representation below.
- Turn one LP tank gas valve completely counter-clockwise to open gas supply to one side of the grill.
- Light one side of the grill at a time.
- Immediately place a lighted match through one lighting hole underneath the center of the grill. There are two lighting holes. Make sure to place the match at right hole, nearest the control in use.
- If burner fails to light, turn control knob to `OFF` position by turning clockwise until a positive stop is felt and wait 5 minutes for unburned gases to clear before attempting to light grill again.

Forcing control knobs will damage valves.

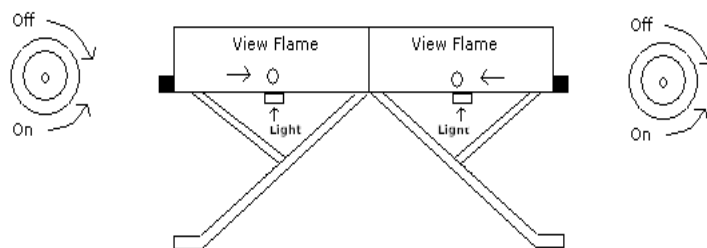

WHILE OPERATING THE GRILL

- DO NOT move the grill.
- DO NOT leave the grill unattended
- DO NOT obstruct the flow of combustion and ventilation air.
- Keep any electrical supply cord and the fuel supply hoses away from any heated surfaces.
- Keep area around the grill clean and clear of debris, combustible materials, gasoline and other flammable vapours and liquids.
- Turn off the gas at the supply cylinders while not actually in use.

CARE AND MAINTENANCE

- Inspect the grill regularly to make sure that all parts are functioning properly.
- Visually check the burner flames, using the pictorial representation at 'LIGHTING PROCEDURES'. If the flames are not steady with blue body and yellow tips and continuous along both sides of each burner, TURN OFF at the LP-gas tank and consult a gas engineer.
- Replace all broken or worn parts.
- Burn-off grease build-up by operating the grill at maximum heat setting for 15 minutes at the end of each use. This will substantially extend the life of your grill.
- Empty or replace grease drip can at the end of each use.
- Clean the grill body, handles and legs with mild detergent.
- Check and remove any dust, debris or spider webs from the burner venturi.
- Inspect the hose. If it is evident there is excessive abrasion or wear, or a hose is cut, it must be replaced immediately. The replacement hose assembly must be that specified by the manufacturer. Refer to the last page of this manual.

- Light the appliance, after reading the LIGHTING PROCEDURES section of these instructions. The burners should light immediately, and be viewed from both sides to exhibit blue flames with occasional yellow tips. These should extend along the full length of the single burner in each fire box.

- Replacement parts are available from the manufacturer, through your distributor. Refer to the contact details on the last page if experiencing difficulty.

STORAGE

- Disconnect the LP cylinders from the grill when not in use and store the LP cylinders as instructed by labels located on the cylinder. DO NOT store the LP cylinders in an enclosed area and NOT within the reach of children.
- Complete the procedures in 'CARE AND MAINTENANCE' before storage.
- Store the grill in a clean and dry location.

MANUFACTURER`S LIMITED WARRANTY

Limited warranty is extended to the original purchaser of the grill. To make a warranty claim the customer must show proof of purchase.

Stainless steel grill body and support legs are warranted to be free of defects in material and workmanship under normal use for a period of two years from the date of purchase.

The burners are warranted to be free of defects in material and workmanship under normal use for life.

The finish and other components of the grill are warranted to be free of defects in material and workmanship under normal use for a period of two years from the date of purchase.

This warranty does not cover any failure due to abuse, misuse, alteration, improper assembly, improper installation, improper maintenance or improper storage.

This warranty gives specific legal rights and you may have other rights which vary from state to state.

CINDERS BARBECUES LIMITED
BENTHAM INDUSTRIAL ESTATE
HIGH BENTHAM
LANCASTER
LA2 7NB
ENGLAND

Tele from USA : 011 44 15242 62900
Fax from USA : 011 44 15242 62955
Email: info@cindersbarbecues.com

United States Office
CINDERS SLIMFOLD LLC
1990 MAIN STREET, STE 750
SARASOTA, FL 34236

PHONE: 941-309-5307
FAX: 941-309-5147
E-MAIL: info@slimfoldgrills.com
TOLLFREE: 1-877-426-2900